


Fitting Instructions for Shatterproof FEP Lamp



1. Slide the boot all the way over the lamp.



2. Leave a gap between the tip of the lamp and the welded end of the boot. We recommend 10mm between inside of weld and lamp tip.

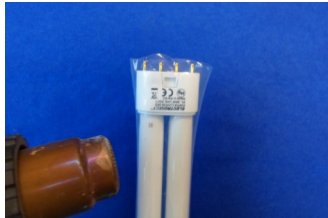

3. When shrinking always start at the glass section, just before where the boot is starting to flare out slightly.



4. Shrink material fully and work towards the end of the plastic cap.



5. Make sure the material has shrunk fully.



6. Trim the material from the end of the lamp.

For more information about our Shatterproof Lamp Coatings, please visit adtech.co.uk.

For technical assistance, contact our customer service team:

+44 (0)1285 762000 - sales@adtech.co.uk